

Baby Talk Rechargeable



The totally portable baby monitor with visual sound level indicator

Operating instructions. Please read carefully and retain for future reference

The Lindam Baby Talk Rechargeable is designed to help you monitor your child and is not intended as a substitute for adult supervision. We would therefore advise that you check at regular intervals to establish your child's well being.


Features

- Clear reception up to 200 metres (655 feet).
- The Baby Unit will pick up sound up to 1.5m from your baby.
- A sound level indicator on the Parent Unit gives a visual indication of the level of sound from the baby.
- A 'power on' indicator is provided on both Baby Unit and Parent Unit for peace of mind.
- 2 separate channels are provided to prevent interference from other users.
- Safety volume control prevents users from accidentally turning the volume down too low.

GETTING STARTED

BABY UNIT

You can choose to power your Baby Unit by batteries or by mains electricity.

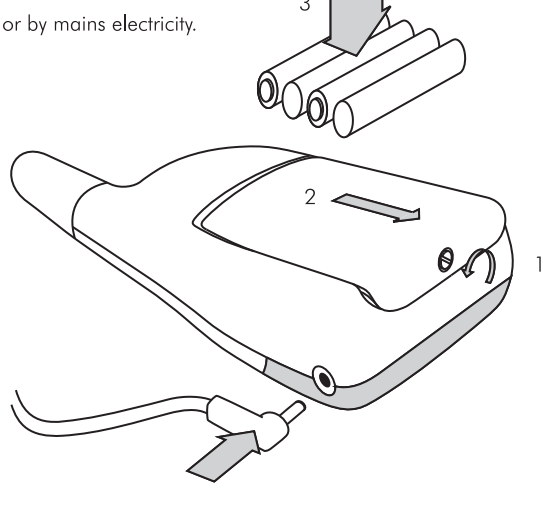

Battery Operation

Use only alkaline batteries size LR6/AA. You will require 4 batteries for the baby unit.

Using a flat headed screwdriver undo the screw on the base of the unit, then slide open the battery cover and insert the batteries. Ensure that the battery terminals +/- correspond to the markings inside the battery compartment. Turn on the unit and make sure that the power light is illuminated. If not, check that you have inserted the batteries correctly.

NOTE: Always use new batteries of the same type.

Mains Operation

Your Baby Talk Rechargeable can be mains operated using the adaptor supplied.

Simply plug the adaptor into the socket situated on the side of the Baby Unit and connect the adaptor to a convenient mains socket and switch on the mains. Turn on the Baby Unit and the Parent Unit and ensure that the power indicators are illuminated.

NOTE: Power indicator lights must be checked each time the units are used to ensure that the power is on.

WARNING: Only use the rechargers and adaptors supplied with your Baby Talk monitors. The use of any other power supply is not approved and may damage the product.

PARENT UNIT

You can choose to power your Parent Unit by rechargeable batteries or by mains electricity.

CAUTION: To reduce the risk of electric shock, do not expose the units to rain or moisture.

Battery Operation

The Parent Unit is fitted with NiMH (Nickel Metal Hydride) rechargeable batteries which require charging before use. The battery compartment is sealed and can only be opened by an approved service center.

To charge simply plug the adaptor into the socket situated on the side of the Parent Unit and connect the adaptor to a convenient mains socket and switch on the mains. You should charge the batteries for **16 hours initially** with the **Parent Unit Off** to condition the battery and ensure a long working life.

WARNING:

- Only use the rechargers and adaptors supplied with your Baby Talk monitors. The use of any other power supply is not permitted and may damage the product.
- Only use the rechargeable battery pack supplied with your Baby Talk (4.8V 800mAh Ni-MH)
- For replacements please call the Lindam customer careline.

The Parent Unit can be On or Off when recharging. It is recommended that you charge the unit for 14-16 hours.

NOTE: When the Parent Unit battery is low the power on light will flash. We advise that the batteries in the parent unit are fully discharged once a week to ensure the best performance of your batteries.


WARNING: Do not leave the unit charging for longer than 20 hours.

Mains Operation

You may also operate the Parent Unit directly from the mains using the adaptor as instructed above. This will also trickle charge your batteries.

Channel Selection

Your Lindam Baby Talk Rechargeable can operate on 1 of 2 internal channels. The channel selection switch is situated on the side of each units. Always check that **both units** are set on the **same channel** otherwise your monitor will not work. If you experience interference then change the channel on both your Baby Unit and Parent Unit.

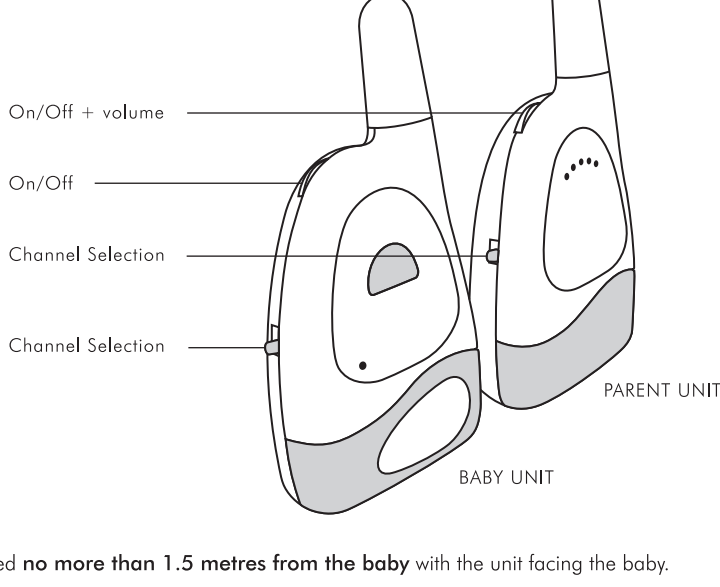

Positioning

The Baby Unit should be positioned **no more than 1.5 metres from the baby** with the unit facing the baby.

IMPORTANT: If you intend to use the Baby Unit with the mains adaptor then you should position the unit so that the power cord is in a safe place and will not be within reach of the baby.

The Parent Unit can be placed in any convenient place within 200m of the Baby Unit (The range may be reduced by obstructions and the construction of your building). It is recommended that you perform a test as outlined over leaf to ensure optimum performance.

OPERATING AND TESTING THE MONITORS

The following test procedure should be carried out before each use.

1. Turn on both units using the On/Off switch located on the top of both units. Confirm that the batteries and/or the adaptor are working by checking that the green power light is illuminated.
NOTE: The Parent Unit will emit a hissing noise until the Baby Unit is turned on.
2. Check that the channel selected is the same on both units.
3. Test the system by having another adult talk into the Baby Unit while you listen to the Parent Unit and move around the home. Note any areas of poor reception. Set the Parent Unit volume to the desired level. The further away from the Baby Unit, the higher the volume control will have to be set.

Visual Volume Level Indicator

The visual volume indicator incorporates 3 green lights and 1 red light. Sound is at its highest when the red light is illuminated.

Thermometer (Baby Unit)

You can adjust your monitor to display the nursery temperature in °F (the default setting is °C).

1. Ensure the Baby Unit is being powered by the mains using the adaptor (this will ensure power is maintained whilst you carry out steps 2 and 3. You may revert to battery power as soon as the whole process is complete).
2. Open the battery compartment and remove the lowest battery.
3. Insert a paper clip through the small hole and press the button once to change to °F.
4. Replace the battery and the battery compartment lid.

Night Light (Baby Unit)

The night light on the Baby Unit will illuminate when the unit is powered by the adaptor. The light will not operate when the unit is powered by batteries.


Cot/Belt Clip

These can be attached if desired and are useful for when you're moving around your home (Parent Unit) or for locating the Baby Unit close to your child.

1. Use your thumb to remove the small cover at the back of your monitor.
2. Press the Cot/Belt Clip in and up until it clicks into place.

WARNING: Keep the cover in a safe place away from small children. Loose parts can present a swallowing hazard.

IMPORTANT: Once your child can sit unaided DO NOT clip the Baby Unit to your cot and always ensure the Baby Unit and power cord are out of reach of your child.

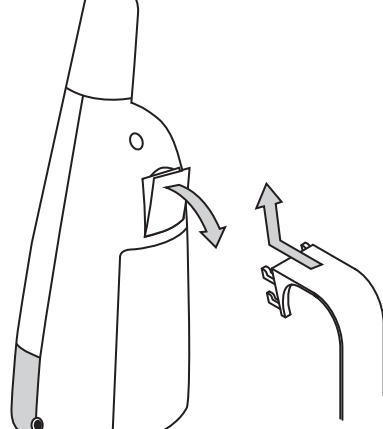

CARING FOR YOUR LINDAM BABY TALK MONITOR

Your Lindam Baby Talk monitor has been designed to give you good service and a little care will help protect your investment.

- DO - Replace batteries in the Baby Unit as soon as they stop working. Exhausted batteries could leak and cause damage to your units.
- DO - Dispose of exhausted batteries safely and never dispose of batteries in a fire.

CAUTION - To reduce the risk of electric shock, do not expose this appliance to rain or moisture.
CAUTION - Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type H-AA800BX4 (available from the Lindam careline).

DO NOT - Use abrasive or chemical cleaners on the units. A soft cloth lightly moistened will remove light soiling without causing damage.

DO NOT - Expose to bright sunlight (ie. a window sill) for extensive periods of time.

Troubleshooting

Green power light does not illuminate	Switch on both units Batteries flat, recharge batteries in Parent Unit Fit new batteries in Baby Unit Switch on the mains supply
Green power light dim	Batteries running low, fit new ones on the Baby Unit or use mains adaptor
Green power light flashes (Rechargeable Parent Unit)	Recharge batteries using adaptor supplied
Poor Reception	Parent Unit is too far away, move it closer to the Baby Unit Batteries low on power, fit new ones or use mains adaptor in Baby Unit Recharge batteries in Parent Unit

Lindam customer careline

If you experience any difficulty with your monitor we provide help and advice on our customer careline between 10am and 4pm from Monday to Friday (UK only).

telephone: **08701 118 118** email: **careline@lindam.com**


EC DECLARATION OF CONFORMITY

We: Lindam Limited Hornbeam Park Harrogate HG2 8PA England

Declare under our sole responsibility that the following product(s): Model: Lindam Part Number: LD78R

Is in conformity with the following relevant harmonised standards:
BSEN 60065:2002 EN 300220:2000 EN 301489:2002

Following the provisions of the Council Directive 1999/5/EC on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity,

Name: Mark Rycroft Position: Director Signature:  Date: 28.10.2004